User Manual

Version 1.0 July 2013

Teostouch

8450E - 1050E- 1250E

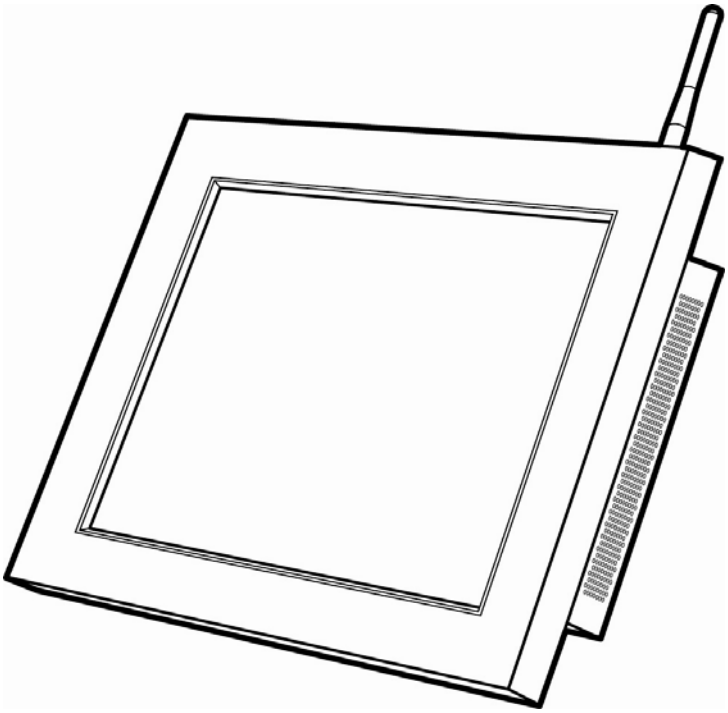

Copyright 2013
All Rights Reserved
Manual Version 1.0

The information contained in this document is subject to change without notice. We make no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. We shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced or translated to another language without the prior written consent of the manufacturer.

TRADEMARK

Intel®, Pentium® and MMX are registered trademarks of Intel® Corporation. Microsoft® and Windows® are registered trademarks of Microsoft Corporation. Other trademarks mentioned herein are the property of their respective owners.

Safety

IMPORTANT SAFETY INSTRUCTIONS

1. To disconnect the machine from the electrical Power Supply, turn off the power switch and remove the power cord plug from the wall socket. The wall socket must be easily accessible and in close proximity to the machine.
2. Read these instructions carefully. Save these instructions for future reference.
3. Follow all warnings and instructions marked on the product.
4. Do not use this product near water.
5. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
6. Slots and openings in the cabinet and the back or bottom are provided for ventilation; to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register, or in a built-in installation unless proper ventilation is provided.
7. This product should be operated from the type of power indicated on the marking label. If you are not sure of the type of power available, consult your dealer or local power company.
8. Do not allow anything to rest on the power cord. Do not locate this product where persons will walk on the cord.
9. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

CE

CE MARK

This device complies with the requirements of the EEC directive 2004/108/EC with regard to “Electromagnetic compatibility” and 2006/95/EC “Low Voltage Directive”

FC

FCC

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference.

(2) This device must accept any interference received, including interference that may cause undesired operation

CAUTION ON LITHIUM BATTERIES

There is a danger of explosion if the battery is replaced incorrectly. Replace only with the same or equivalent type recommended by the manufacturer. Discard used batteries according to the manufacturer's instructions.

Battery Caution

Risk of explosion if battery is replaced by an incorrectly type.
Dispose of used battery according to the local disposal instructions.

Safety Caution

Note: To comply with IEC60950-1 Clause 2.5 (limited power sources, L.P.S) related legislation, peripherals shall be 4.7.3.2 "Materials for fire enclosure" compliant.

4.7.3.2 Materials for fire enclosures

For MOVABLE EQUIPMENT having a total mass not exceeding 18kg.the material of a FIRE ENCLOSURE, in the thinnest significant wall thickness used, shall be of V-1 CLASS MATERIAL or shall pass the test of Clause A.2.

For MOVABLE EQUIPMENT having a total mass exceeding 18kg and for all STATIONARY EQUIPMENT, the material of a FIRE ENCLOSURE, in the thinnest significant wall thickness used, shall be of 5VB CLASS MATERIAL or shall pass the test of Clause A.1

LEGISLATION AND WEEE SYMBOL

2012/19/EU Waste Electrical and Electronic Equipment Directive on the treatment, collection, recycling and disposal of electric and electronic devices and their components.

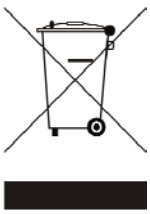

The crossed dustbin symbol on the device means that it should not be disposed of with other household wastes at the end of its working life. Instead, the device should be taken to the waste collection centers for activation of the treatment, collection, recycling and disposal procedure.

To prevent possible harm to the environment or human health from uncontrolled

waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract.

This product should not be mixed with other commercial wastes for disposal.

Revision History

Version	Date	Description
1.0	November 2013	• Initial release

Table of Contents

1 Package Checklist....1

1-1 Standard items....1
1-2 Optional items....2

2 System View....3

3 System Assembly & Disassembly....5

3-1 Open the System Box....5
3-2 Replace the HDD....6

4 Peripherals Installation....7

4-1 Install a WLAN....7
4-2 Install a pSSD Card....9
4-3 Install a Cash Drawer....11
4-4 Replace the Motherboard....13
4-5 Install Fingerprint, iButton, RFID....15

5 Specification....16

6 Configuration....18

6-1 C56 Motherboard Layout....18
6-2 Connectors & Functions....19
6-3 Jumper Setting....20

Appendix: Driver Installation....23

1 Package Checklist

1-1 Standard items

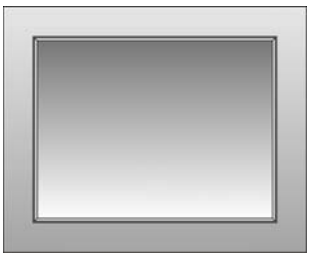	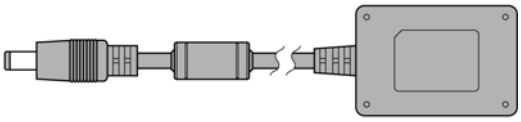
a. System	b. Power adapter
c. Power cord	d. RJ45 to DB9 cable (x4)
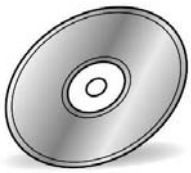	
e. Manual CD	

1-2 Optional items

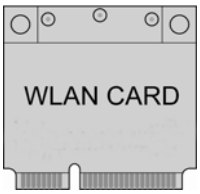	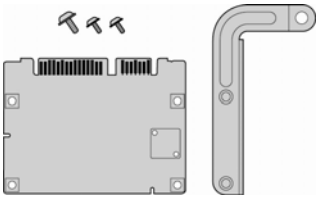
a. WLAN card	b. pSSD card

2 System View

Front View

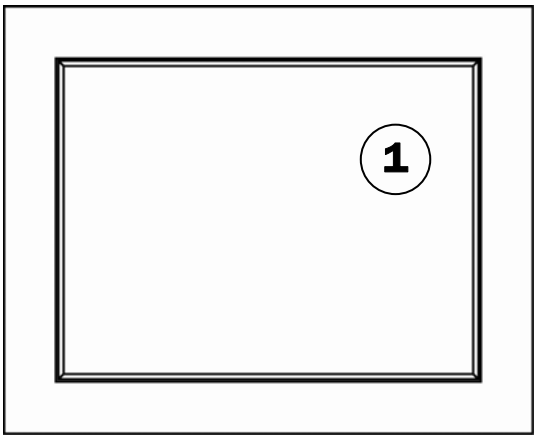

Rear View

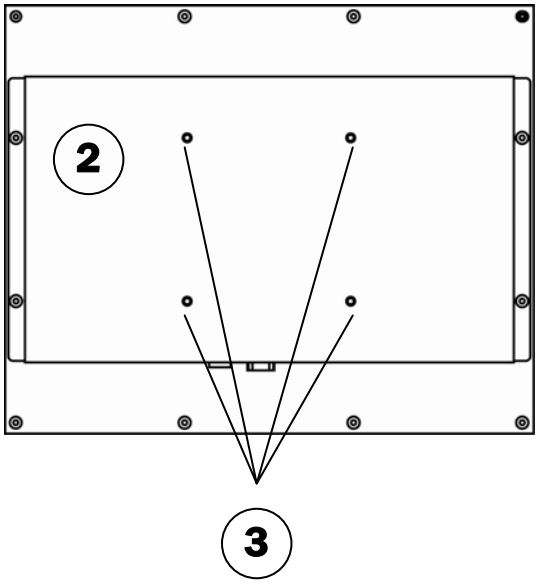

Side View

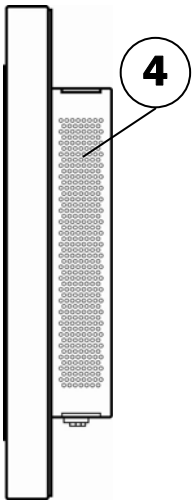

Top View

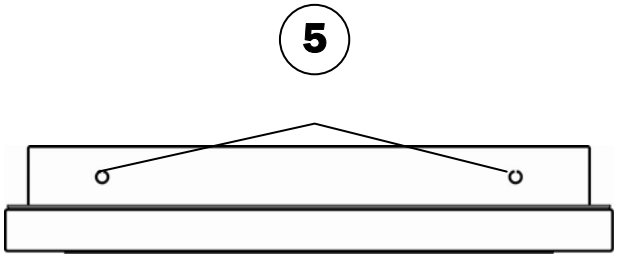

No.	Description
1	Touch screen
2	System box
3	VESA mount holes
4	Ventilation
5	External antenna holes

Rear I/O View

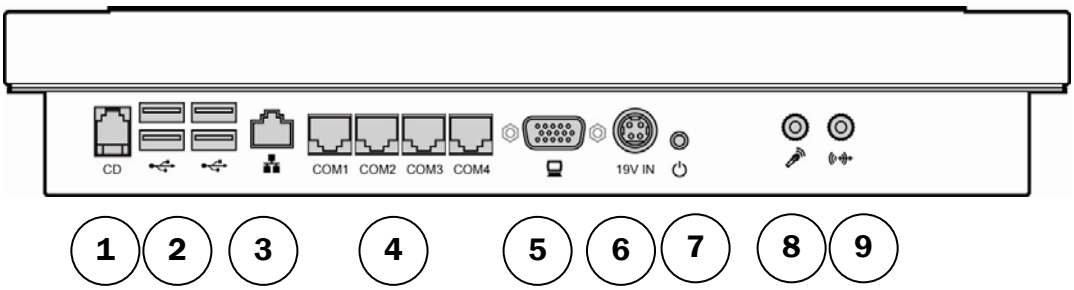

No.	Description
1	Cash drawer port
2	USB (x4)
3	LAN (10 / 100/1000)
4	COM Port 1,2,3,4 (From left to right)
5	2nd VGA
6	DC jack
7	Power button
8	MIC-in (only for 10.4” and 12.1”)
9	Line-out (only for 10.4” and 12.1”)

3 System Assembly & Disassembly

3-1 Open the System Box

To access the Motherboard, HDD or install the WLAN and pSSD card, you need to open the system box first which is located in the rear cover of the LCD panel. The procedure of opening the system box as below:

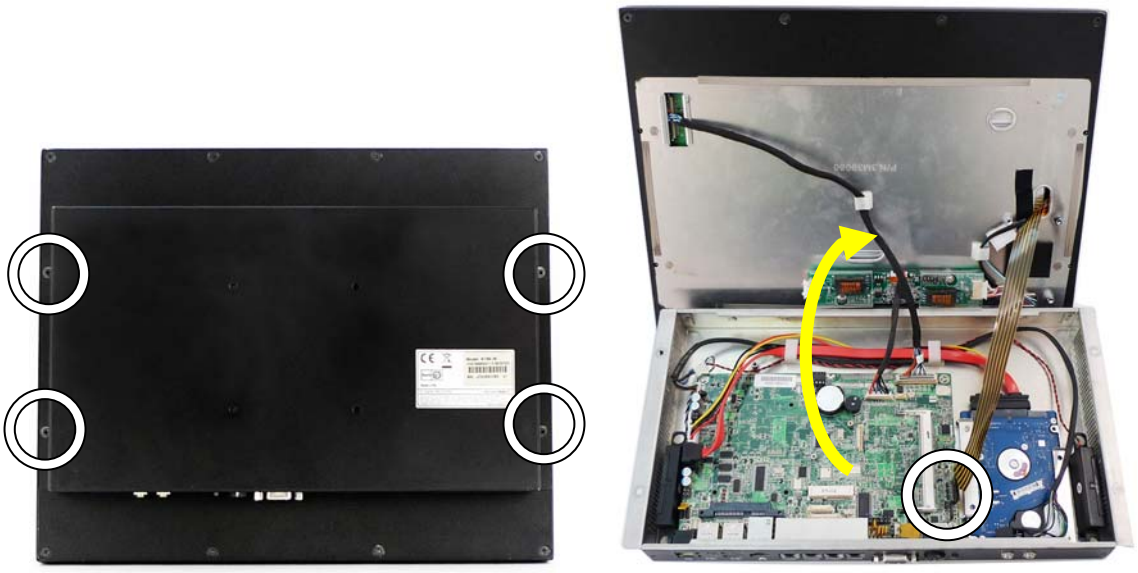

1. Unfasten the screws (x4)
2. Gently flip up the LCD panel with touch module due to various connectors connecting to the motherboard.

3-2 Replace the HDD

For 8.4”/10.4” System

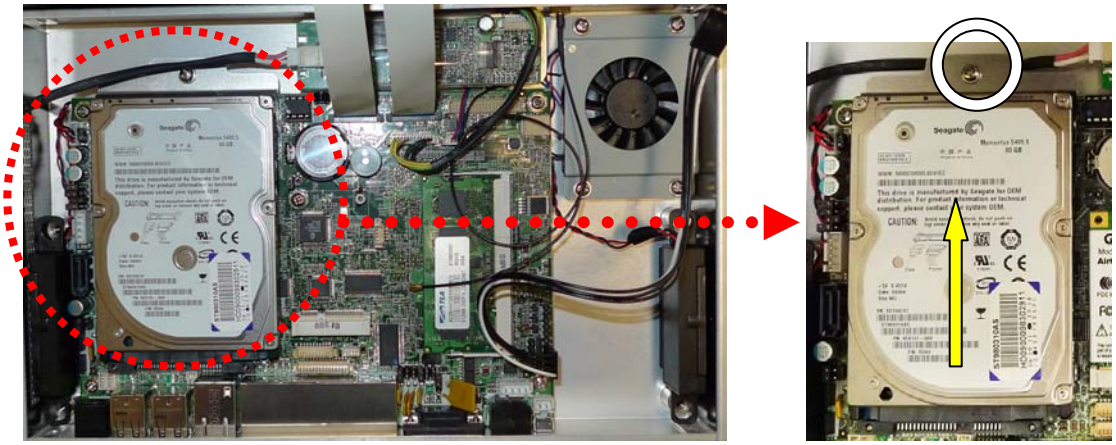

For 12.1” System

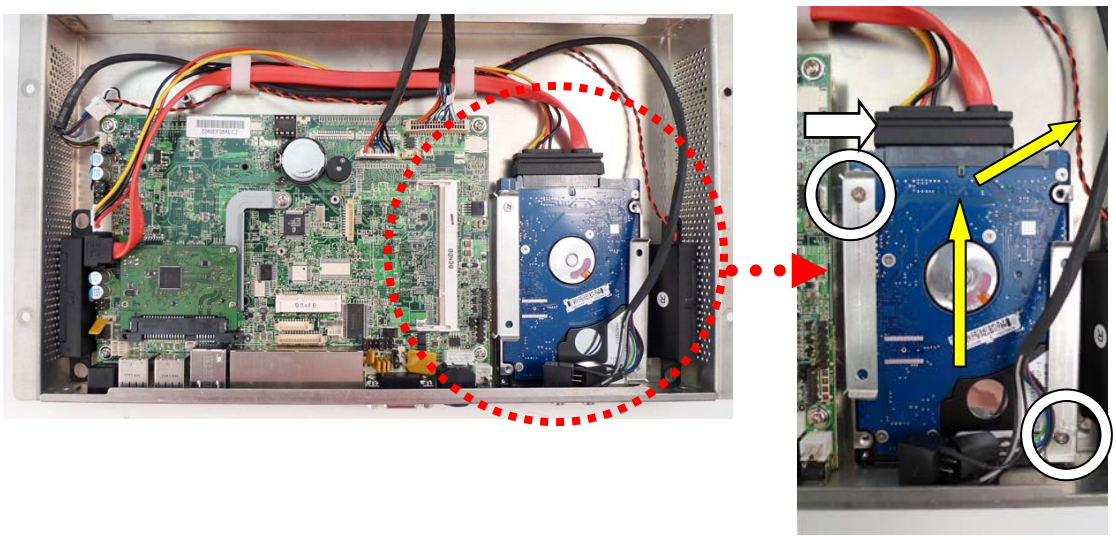

1. Open the system box (Chapter 3-1).
2. 8.4”, 10.4”**:** Remove the thumb screw (x1) on the rear side of the stand and slide the HDD outward.
   12.1”: Disconnect the SATA cable and remove the screws (x2) and slide the HDD right front.

4 Peripherals Installation

4-1 Install a WLAN

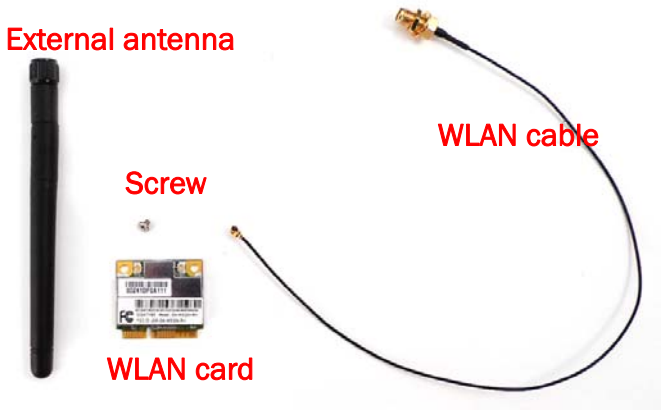

WLAN Card Module Accessory:

(1). External antenna x 1

(2). WLAN card x 1

(3). Screw x 1

(4). WLAN cable x 1

1. Open the system box first (Chapter 3-1).
2. Connect the WLAN cable to the “Main Connector“ on the WLAN card.

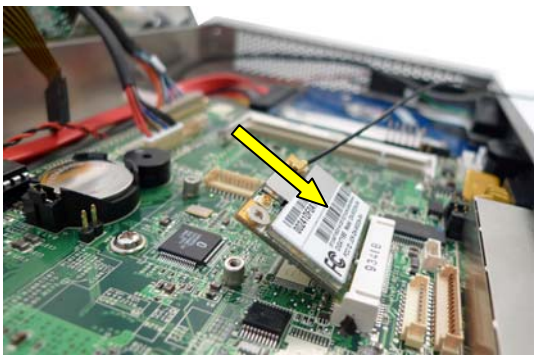

3. Slide the WLAN card into the WLAN card slot.

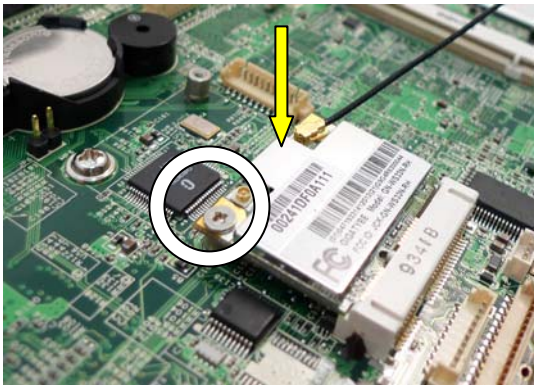

4. Press down the WLAN and fasten the screw (x1) to fix the WLAN card to the Motherboard.

5. Open the blind hole on the system box.
6. Align and thread the other end of antenna cable through the blind hole.

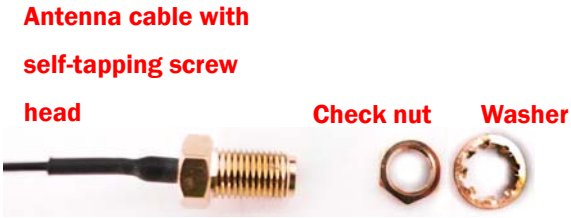

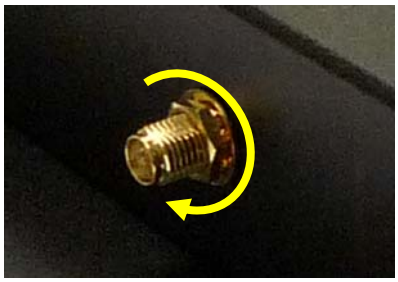

7. Assembly the antenna cable and rotate the washer to fix the antenna cable to the system box.

8. Screw the antenna into the screw.

4-2 Install a pSSD Card

pSSD Card Module Accessory:

(1). pSSD card x 1

(2). Screws x 2

(3). Metal bracket x 1

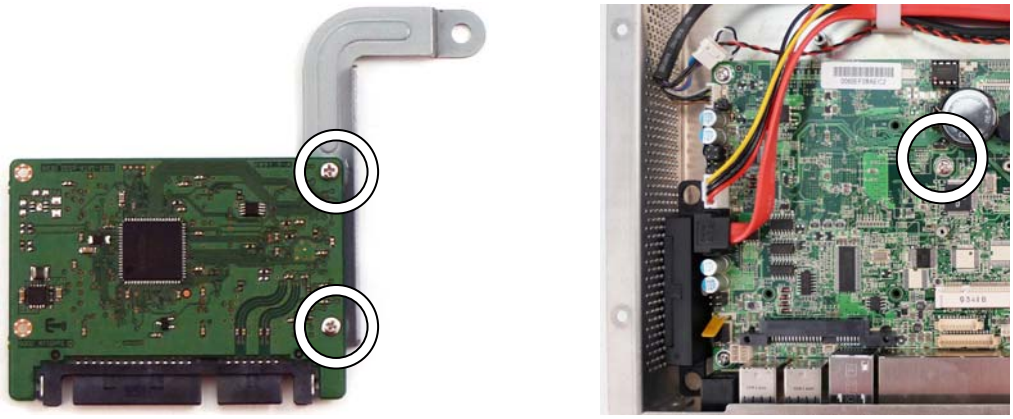

1. Open the system box first (Chapter 3-1).
2. Assemble the metal bracket and a pSSD card by fastening the screws (x2).
3. Remove the screw (x1) fixing on the motherboard.

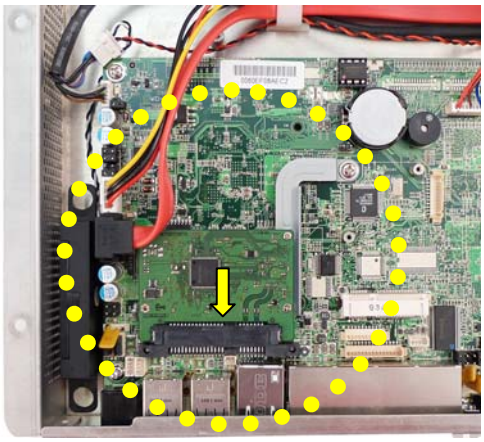

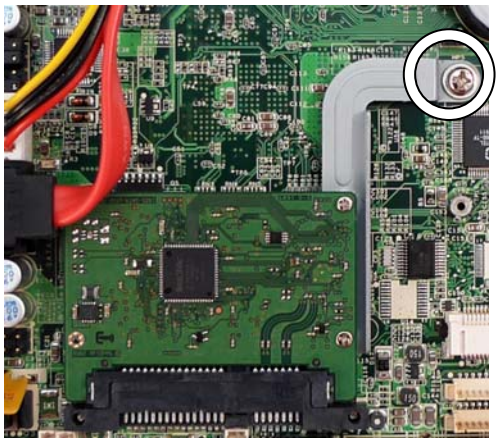

4. Slide the pSSD card module into the pSSD/HDD slot as the position and location as above left picture shows.
5. Screw back the screw (x1) to fix the pSSD module to the motherboard.

4-3 Install a Cash Drawer

You can install a cash drawer through the cash drawer port. Please verify the pin assignment before installation.

Cash Drawer Pin Assignment

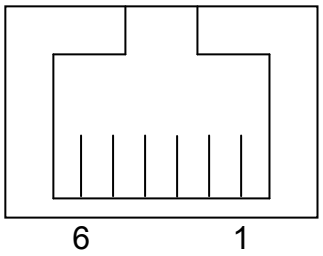

Pin	Signal
1	GND
2	DOUT bit0
3	DIN bit0
4	12V / 19V
5	DOUT bit1
6	GND

Cash Drawer Controller Register

The Cash Drawer Controller use one I/O addresses to control the Cash Drawer.

Register Location: 48Ch
Attribute: Read / Write
Size: 8bit

BIT	BIT7	BIT6	BIT5	BIT4	BIT3	BIT2	BIT1	BIT0
Attribute	Reserved	Read	Reserved		Write		Reserved	

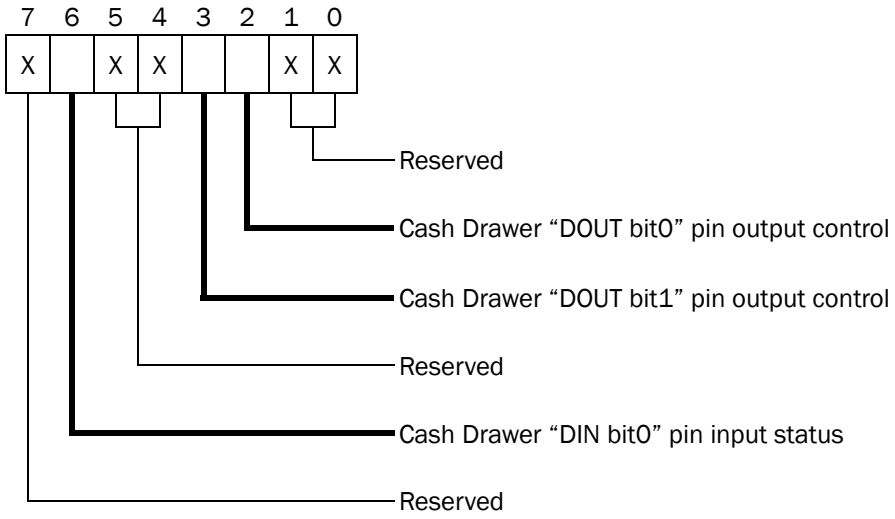

Bit 7: Reserved

Bit 6: Cash Drawer “DIN bit0” pin input status.

= 1: the Cash Drawer closed or no Cash Drawer

= 0: the Cash Drawer opened

Bit 5: Reserved

Bit 4: Reserved

Bit 3: Cash Drawer “DOUT bit1” pin output control.

= 1: Opening the Cash Drawer

= 0: Allow close the Cash Drawer

Bit 2: Cash Drawer “DOUT bit0” pin output control.

= 1: Opening the Cash Drawer

= 0: Allow close the Cash Drawer

Bit 1: Reserved

Bit 0: Reserved

Note: Please follow the Cash Drawer control signal design to control the Cash Drawer.

Cash Drawer Control Command Example

Use Debug.EXE program under DOS or Windows98

Command	**Cash Drawer**
O 48C 04	Opening
O 48C 00	Allow to close
➢ Set the I/O address 48Ch bit2 =1 for opening Cash Drawer by “DOUT bit0” pin control. ➢ Set the I/O address 48Ch bit2 = 0 for allow close Cash Drawer.	

Command	**Cash Drawer**
I 48C	Check status
➢ The I/O address 48Ch bit6 =1 mean the Cash Drawer is opened or not exist. ➢ The I/O address 48Ch bit6 =0 mean the Cash Drawer is closed.	

4-4 Replace the Motherboard

To access the motherboard, you need to open the system box which is attached to the rear of the LCD Panel.

For 8.4” / 10.4” system

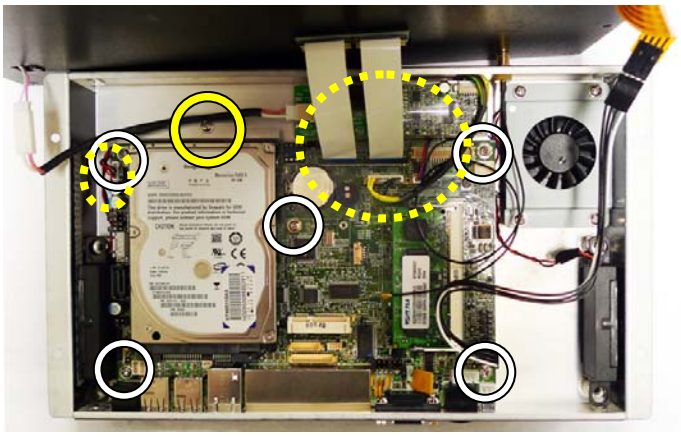

1. Open the system box (Chapter 3-1).
2. Disconnect all the connectors connecting on the motherboard (as dotted-line circle shows).
3. Remove the screws (x5) that fix the motherboard to the sheet metal bracket.
4. Remove the HDD screw (x1) to separate the HDD from the motherboard.
5. Remove the hex screws (x2) on the I/O panel.

For 12.1” system

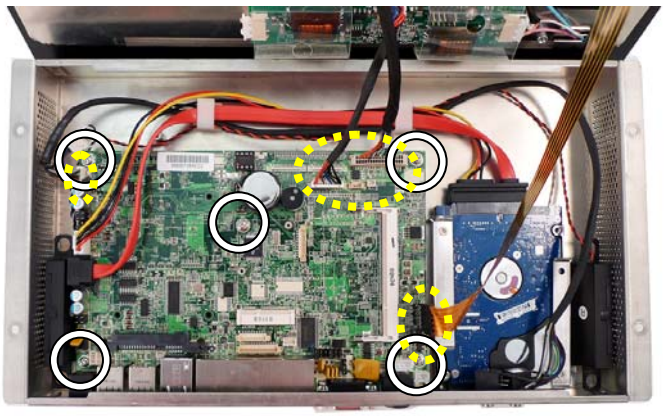

1. Open the system box (Chapter 3-1).
2. Disconnect all the connectors connecting on the motherboard (as dotted-line circle shows).
3. Unfasten the screws (x5) that fix the Motherboard to the sheet metal bracket.
4. Unfasten the hex screws (x2) on the I/O panel.

4-5 Install Fingerprint, iButton, RFID

Fingerprint, iButton, RFID are supposed to be assembled at the same place of the system.

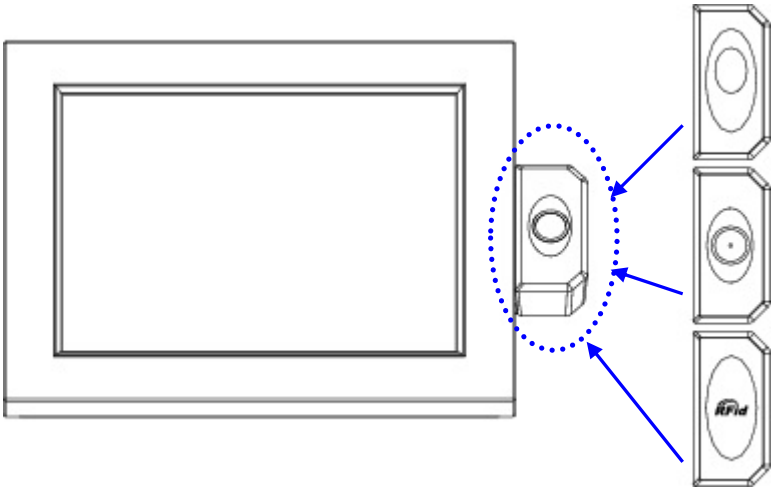

1. The modules can be fixed to the system by fastening screws (x2) on the back.

5 Specification

Model	Teostouch 8450E / 1050E / 1250E
Motherboard	**C56**
CPU Supports	Intel CedarView D2550 processor 1.86GHz 1MB Cache
Chipset	Intel NM10
System Memory	1 x DDR3 SO-DIMM socket up to 4G, FSB 1067MHz
Graphic Memory	Intel GMA 3650 (Gfx frequency up to 640MHz), DX9
LCD Panel	
LCD Size	Teostouch 8450E: 8.4" / Teostouch 1050E: 10.4" / Teostouch 1250E: 12.1"
Maximal Resolution	Teostouch 8450E / 1050E: 800 x 600, Teostouch 1250E: 1024 x 768
Touch Screen Type	Resistive
Storage	
HDD	1 x slim HDD bay (SATA)
Flash Memory	SATA SSD Flash memory card 8G/16G/32G/64G (option)
Expansion	
Mini-PCI e Socket	1
Rear I / O	
USB	4 (USB 2.0)
Serial/COM	4 x RJ45 COM1 standard RS232; COM2/3/4 powered RS232; COM2 default 0V; COM3 default 5V; COM4 default 12V by BIOS setting)
LAN (10 / 100/1000)	1
2nd VGA	1 (DB-15 Female)
Cash Drawer Port	1 (12V/24V cash drawer)
Mic-in	Teostouch 8450E / 1050E: NA, Teostouch 1250E: 1
Line-out	Teostouch 8450E: NA, Teostouch 1050E / 1250E: 1
DC Jack	1
Power button	1
Audio	
Speaker	2 x 2W speaker

Model	**Teostouch 8450E / 1050E / 1250E**
Motherboard	**C56**
Peripheral	
MSR	Standard integrated 3 Track MSR (USB)
Power	
Power Supply	External 65W DC adapter 19V 3.4A
Environment	
EMC & Safety	FCC /CE Class A, LVD
Operating Temperature	0°C ~ 35°C (32°F ~ 95°F)
Storage Temperature	-20°C ~ 60°C (-4°F ~ 140°F)
Humidity	20% - 85% RH non condensing
Communication	
Wireless LAN	mini PCI e wireless LAN card 802.11 b/g/n
Dimension (WxDxH)	Teostouch 8450E: 230 x 50 x 188mm Teostouch 1050E: 279 x 50 x 227mm Teostouch 1250E: 323 x 55 x 262mm
Weight (N.W./G.W.)	Teostouch 8450E: 1.34kgs / 1.7kgs Teostouch 1050: 1.7kgs / 2.1kgs Teostouch 1250E: 2.5kgs / 2.9kgs
Mounting	75mm x75mm VESA Standard holes
OS Support	Windows XP, POS Ready 2009, XP Embedded, XP professional for Embedded, Linux (limited support), Windows 7 (32bit), POSReady 7(32bit) Note: 64-bit OS not supported, Windows 8 not supported

*The specification is subject to change without prior notice

6 Configuration

6-1 C56 Motherboard Layout

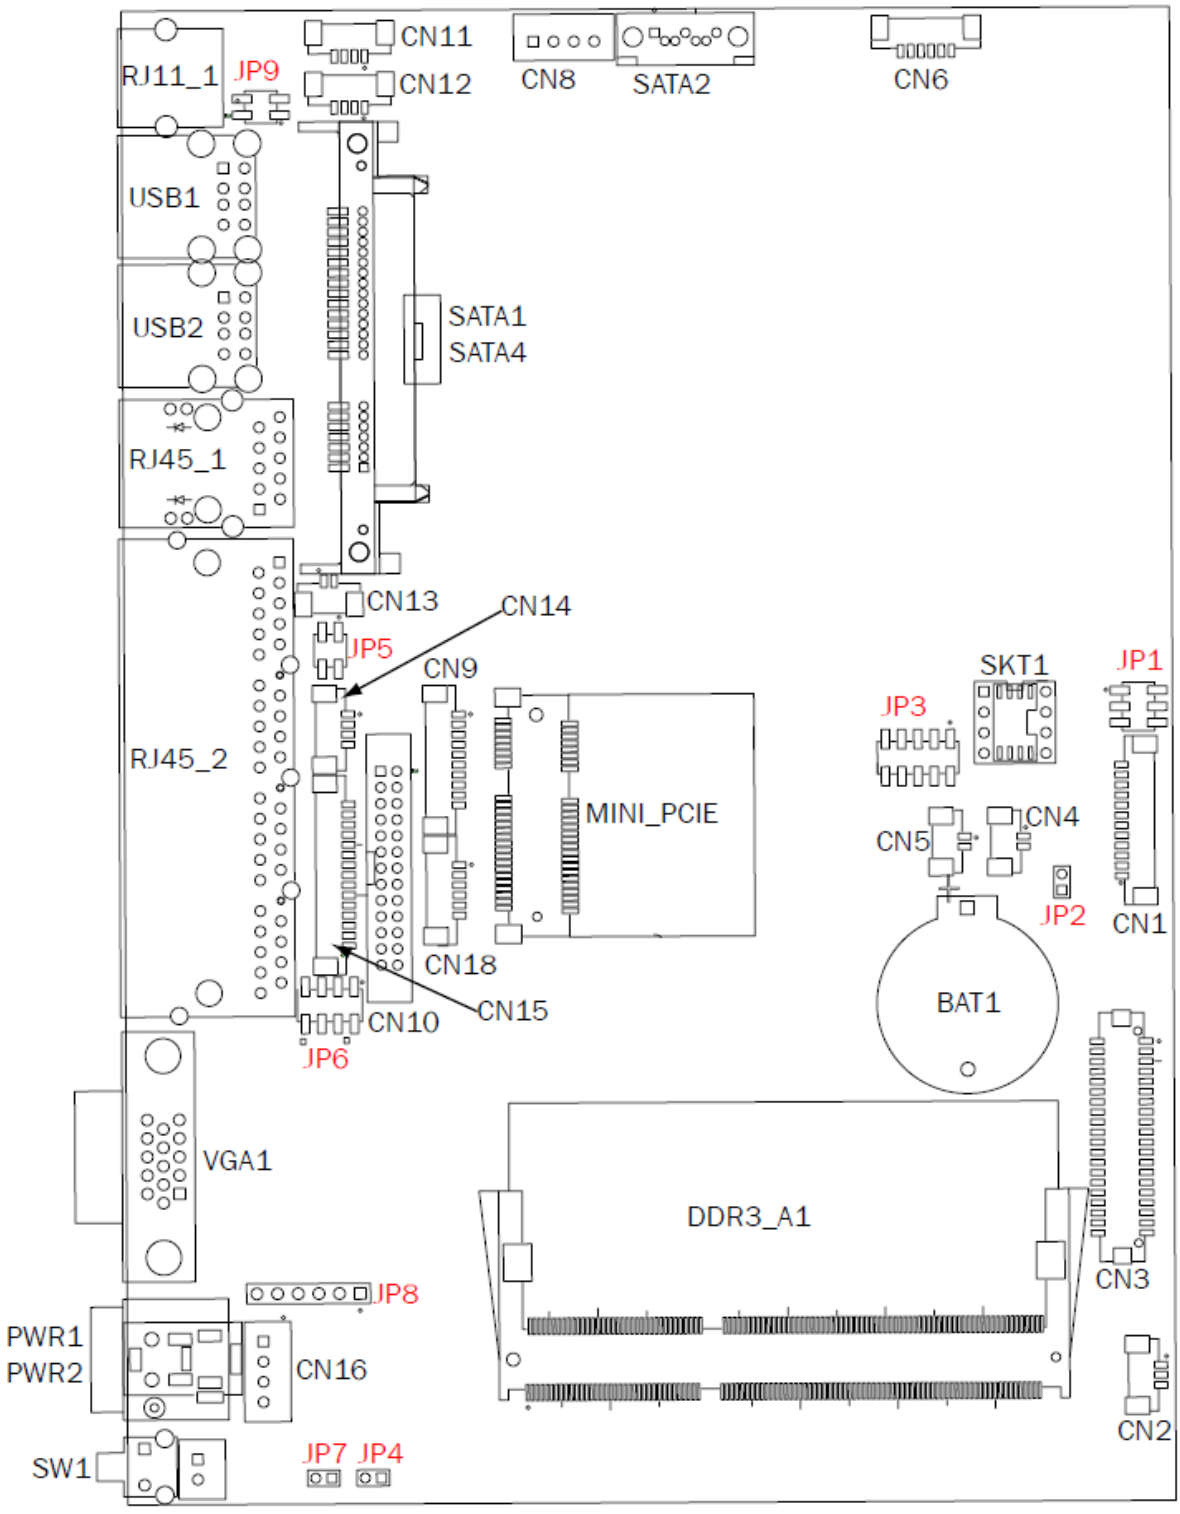

6-2 Connectors & Functions

Connectors	Functions
CN1	LVDS Inverter Connector
CN2	System FAN Connector
CN3	LVDS Connector
CN4	Power LED Connector
CN5	SATA LED Connector
CN6	Speaker & MIC Connector
CN8	SATA Power Connector
CN9	COM5(Touch) Connector
CN10	Printer Port Connector
CN11/12	USB Port(Internal)
CN13	LAN LED Connector
CN14	PS2 Keyboard Connector
CN15	Card Reader Connector(COM6)
CN16	+19V DC IN Connector
CN17	Power button(Internal)
CN18	Front I/O Connector(USB/power LED/ Power button)
PWR2/3	+19V DC JACK
RJ11_1	Cash Drawer Connector
RJ45_1	LAN Connector
RJ45_2	COM1/ COM2/ COM3/ COM4
DDR3_A1	DDR3 SO-DIMM
SATA1/2/4	SATA Connector
SKT1	BIOS Connector
USB1	USB6 USB7
USB2	USB4 USB5
VGA1	VGA Connector
SW1	Power button
JP1	Inverter Select
JP2	CMOS Operation Mode
JP3	LCD ID Setting
JP4	H/W Reset
JP5	COM2 Power Setting
JP6	COM3/COM4 Power Setting
JP8	Touch Connector
JP9	CASH DRAWER Power Setting

6-3 Jumper Setting

Cash Drawer Power Setting

Function	**JP9** (1-2) (3-4)
▲+19V	
+12V	

Inverter Selection

Function	**JP1** (1-2) (3-4) (5-6)
▲LED	
CCFL	

COM2 Power Setting

Function	**JP5** (1-2) (3-4)
▲ No Power	
COM2 +5V	
COM2 +12V	

▲ = Manufacturer Default Setting OPEN SHORT

COM 3 & COM4 Power Setting

Function	**JP6** (1-2) (3-4) (5-6) (7-8)
▲COM3 +5V	
COM3 +12V	
COM4+ 5V	
▲COM4 +12V	

COM2/COM3/COM4 Power Setting

COM2, COM3 and COM4 can be set to provide power to your serial device. The voltage can be set to +5V or +12V by setting jumper JP5 and JP6 on the motherboard. When enabled, the power is available on pin 10 of the RJ45 serial connector. If you use the serial RJ45 to DB9 adapter cable, the power is on pin 9 of the DB9 connector. By default, the power option is **disabled** in the BIOS.

1. Power on the system, and press the <DEL> key when the system is booting up to enter the BIOS Setup utility.
2. Select the Advanced tab.
3. Select **VGA/COM Power and LCD Brightness Configuration** Ports and press <Enter> to go to display the available options.

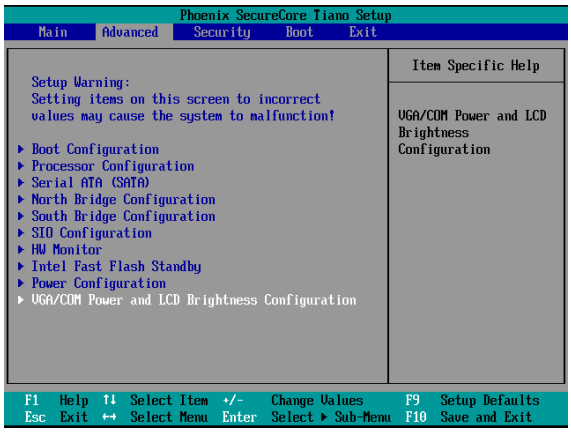

4. To enable the power, select COM2 , COM3 or COM4 Power setting and press <Enter>. Select Power and press <Enter>. Save the change by pressing F10.

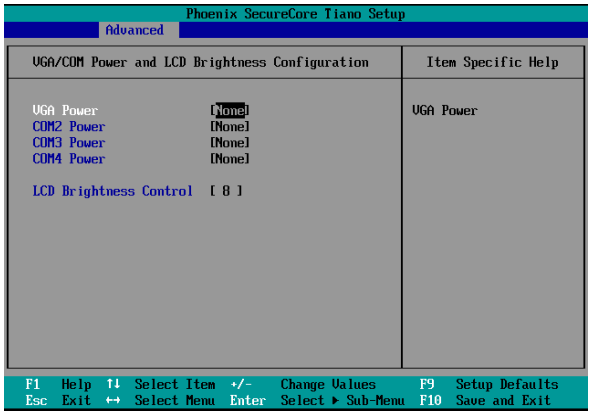

LCD ID Setting

Panel	Resolution	LVDS		Output Interface	JP3 (1-2) (3-4) (5-6) (7-8) (9-10)
		Bits	Channel		
3	800 x 600	24	Single	LVDS Panel	
6	800 x 600	24	Single	LVDS Panel	

Appendix: Driver Installation

To download the most recent drivers and utilities, and obtain advice regarding the installation of your equipment, please visit the AURES Technical Support Website:

www.aures-support.fr (French)
www.aures-support.fr/UK (English)
www.aures-support.fr/GE (German)